1. GENERAL

1.1 Application

Gate valves series 64 are shut-off devices designed for use in high vacuum techniques. They are specifically intended for industrial applications where long operating life is important and where utmoste reliability is required.

1.2 Design

These gate valves are equipped with bodies made of stainless steel. Welded and soldered joints are made to ensure that the valve interior is free from trapped volumes thus guaranteeing small degassing rates.

Sealing of the actuator is ensured by a rotary feed-through keeping the leak rate to the minimum also during operation. The design of the valve mechanism ensures that the valve remains mechanically locked and leak tight in case of compressed air failure.

AT AKTIENGESELLSCHAFT ir Vakuum-Apparate-Technik H-9469 Haag/SG, Schweiz	

		,e+	
Datum	2.1.85	<i>E</i> .	Blatt
Visum	St/ad	MBA e 1342	1/7

2. TECHNICAL DATA

2.1 General technical data

- Pressure range DN 63 200 (2 1/2" 8") $1x10^{-8}$ to 2000 mbar DN 250 320 (10" 12") $1x10^{-8}$ to 1000 mbar
- Max. differential pressure on valve plate
 DN 63 200 (2 1/2" 8") 2000 mbar
 DN 250 320 (10" 12") 1000 mbar
- Max. differential pressure during opening in closing direction
 in opening direction
 1000 mbar*
- Bakeout temperature valve: 150° C (302° F) actuator: 50° C (122° F)
- Mounting position any
- Cycle life until 100'000 closures
- Cycle life 500'000 closures
- Materials

 Body

 1.4301, AISI 304

 Valve plate

 1.4301, AISI 304

 Mechanism

 1.4301, AISI 304

 Bronze

 1.4310, AISI 301

 1.4034, AISI 420
- Seals Viton
- * Note: With this differential pressure the life time will considerably reduced depending on the operating conditions.

2.2 Data of actuator

Motor

Permanent magnet stepping motor MAE, 26010 Offanengo, Italy

Type HY-200-3437-400-A8

- Holding torque

2.2 Nm (bipolar, 4A)

- Detent torque

0.15 Nm

- Current per phase max. 4.0 A (min 3A)

- Resistance per phase 0.75 Ohm (20° C)


- Inductance per phase

1.9 mH

- Steps per turn

200

HY 200 - 3437 - 400 AB

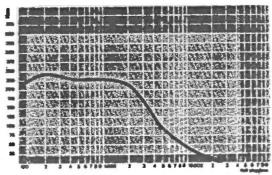

Oriver bipoter chapper - 65 V - 5,6 Amps -Puti in rate ≈ 995 Step/sec

Position indicator switches

One potential change-over switch per final valve position.

Breaking capacity

A.C. 250V/50Hz

D.C. 50V/3A

Valve position potentiometer

10 kOhm Rotary potentiometer 1 W Rating capacity **±**1% Linearity Tolerance on resistance 10%



2.3 Technical Data depending of the nominal diameter

				M	inuti o	perel	lon		Electroprisumetic operation						Electric . motor operation				
			Lever			Spindle													
DN		Conductance in high vacuum	Rotating angle of the lever for complete valve stroke	Weight		Spindle turns per stroke	Weight		Compressed air pressure		Cylinder capacity		Closing and opening time		Weight	Power consumption of electric motor	Closing and opening time	Weight	
तारा	inch	Is ⁻¹	۰	kġ	lbs		-kg	lbs	bar ¹⁾	psig	cm ³	in ³	3	kg	lbs	Watt	3	kg	lbs
63	21/2	380		8	17.6	41	10	22			80	80	2.5	10.5	- 23	21	3	12.2	26.9
100	4	1300		13	28.6	41	15	33			128	7.8	2.5	15.5	34.2	21	3	17.2	37.9
150	6	3500		24	52.9	37	26	57.3	7	93		0	3.5	26.7	58.8	80	4	29	63.9
200	8	8000	130	30	66	37	32	70.5	4-7	55-95	280	17.0	3.5	32.7	72.1	80	4	35	77.2
250	10	13000		58	127.8	48	60	132			750	45.8	6	62.5	137.8	250	7	68	149.9
320	12	17000		108	238	48	110	242.5					6	112	246.8	250	7	118	260

1) Overpressure

3. UNPACKING

Remove plastic packing and protective cover of connection flanges only immediately before mounting the valve into your system.

4. GUARANTEE

VAT gate valves are assembled at our factory under extremely clean conditions. Each valve is carefully tested for conformity with specifications including a Helium leak test. Installation must also be made under clean conditions, and the mounting and operating instructions followed. Failure to observe the mounting and operating instructions, improper operation or modification of the valve will invalidate our warranty.





5. MOUNTING MATERIAL

Depending on the flange type either ISO or UHV (CF) components are required for mounting the valve into the system, which can be supplied by VAT:

6. MOUNTING


6.1 Cleanliness

When handling the valves the following precautions must be observed:

- mounting of the valve must take place under clean conditions normally observed in good vacuum practice
- touch the valve only with clean gloves
- install the valve only into clean systems

6.2 Stress relief

The valve must not be used to support other components of the installation. A bellows section is required to protect the valve from deformation where stress could result from baking or from the weight of other components of the tubing. The below table specifies the maximum allowable forces.

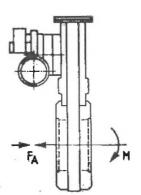

F_A = axial tensile or pressure force

M = bending moment

The 2 stresses toghether (F_A+M) are not permissible

Valv Diam			FA	М			
mm	inch	N	, kp	Nm	kpm		
63	2 1/2	1960	200	78	8		
100	4	2450	250	98	10		
150	6	2940	300	147	15		
200	8	2940	300	147	15		
250	10	3430	350	196	20		
320	12	3920	400	294	30		


In case of heavier loads than indicated on above table, or if a combination of axial forces and bending moments occur, please contact the manufacturer.



VAT AKTIENGESELLSCHAFT für Vakuum-Apparate-Technik CH-9469 Haag/SG, Schweiz **Blatt** 5/7

6.3 Electrical Connection

All connections required for driving the valve with a VAT VALVE CONTROLLER are continued on a 12 $\,\mathrm{pin}$ connector type Burndy.

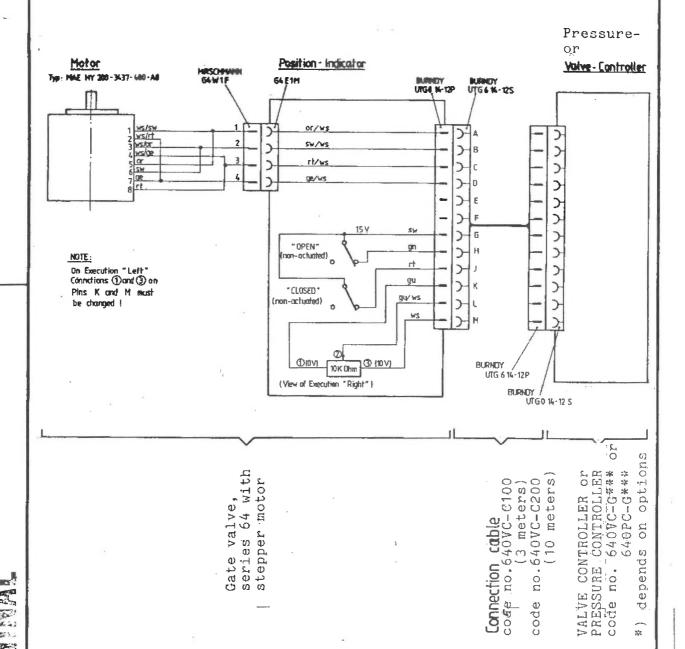



7. MAINTENANCE

These gate valves will operate without maintenance for the number of cycles stated in the specifications provided that they are under clean operating conditions.

8. REPAIR AND SERVICING


Simple repair and servicing (like replacement of the plate seal) may be carried out by the buyer if experienced personnel is available.

Please contact the manufacturer or their representatives for all other repair or service works. According to individual conditions, it will then be decided whether repair or servicing can be effected by the buyer's personnel or by VAT. The fabrication number of the gate valve should always be specified. Our special repair and servicing instructions and/or manuals must be strictly followed.

8.1 Replacement of the plate seal

Proceed as follows:


- Valve in closed position
- Remove body bonnet
- Valve in open position
- Remove hexagon socket screw from the pendulum lever
- Withdraw the bolt with the bearing from the bore, and by turning it, remove it through the slot of the plate



Caution:

Do not change by mistake the friction bearings (see drawing)

- Withdraw the complete valve mechanism from the body
- Replacement of the plate seal: On the side of the valve plate a bore is provided through which compressed air is to be admitted until the O-ring comes out of its groove.



- Cleaning:
 Before mounting the new O-ring, the plate, the valve mechanism and the valve body must be cleaned. For cleaning, use a lint free cloth soaked with alcohol or an equivalent cleaning material.
- Reassembly should follow in reverse order. It must be ensured that the plate O-ring is mounted on the side where the actuator is situated.

